


PAD DRAG REDUCTION KIT INSTALLATION INSTRUCTIONS

(FITS PADS: D905,D1288,D1393,D1415,D1033,D1364)

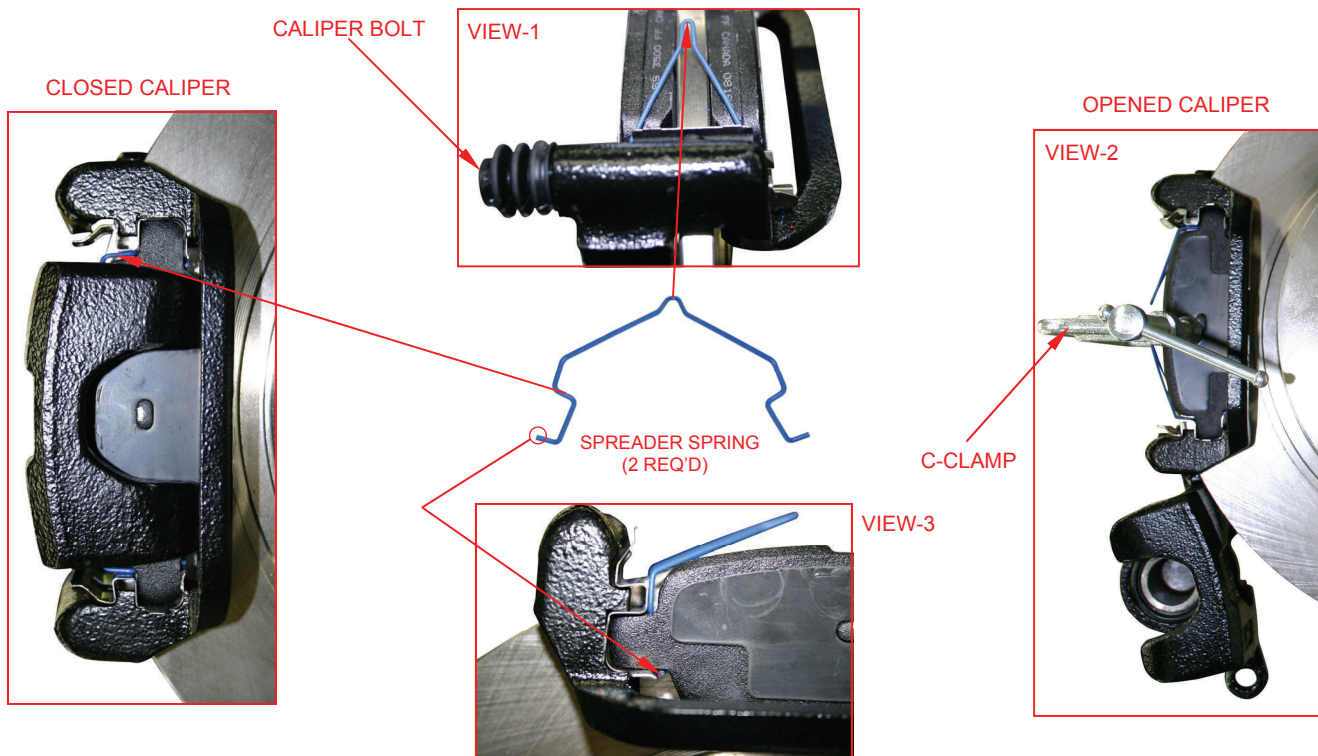

- 1) Remove the caliper bolt and open the caliper while carefully clamping the two brake pads firmly against the rotor using a c-clamp as shown in view 2. If the brake lines prevent the caliper from fully opening, replace the bolt and remove the other one.
- 2) Insert the spreader spring so that it is under the brake pad tabs as shown in view 3.
- 3) The spring must snap into place when installed under the brake pad tabs as shown in view 3. Note the orientation of the spring loop in view 1.
- 4) Replace the caliper while carefully removing the clamp as you reposition the caliper over the pads. Insert and tighten the caliper bolts.

FRENCH

SPANISH